

How to Program Your Desktop Scanner



Scan all the barcodes on the reverse side. Scan them from top to bottom in order to program your desktop scanner

Metrologic MS9520 Programmable Scan Codes

Enter/Exit Configuration Mode



Scan First

Recall Defaults



Scan Second



Expand UPC-E to 12 Digits



Do Not Transmit UPC-A Check Digit



Do Not Transmit EAN-13 Check Digit

Enter/Exit Configuration Mode



Scan Last